


**WOODEN ROCKER**  
**SERIES 4335**  
**ASSEMBLY INSTRUCTIONS**

 
---

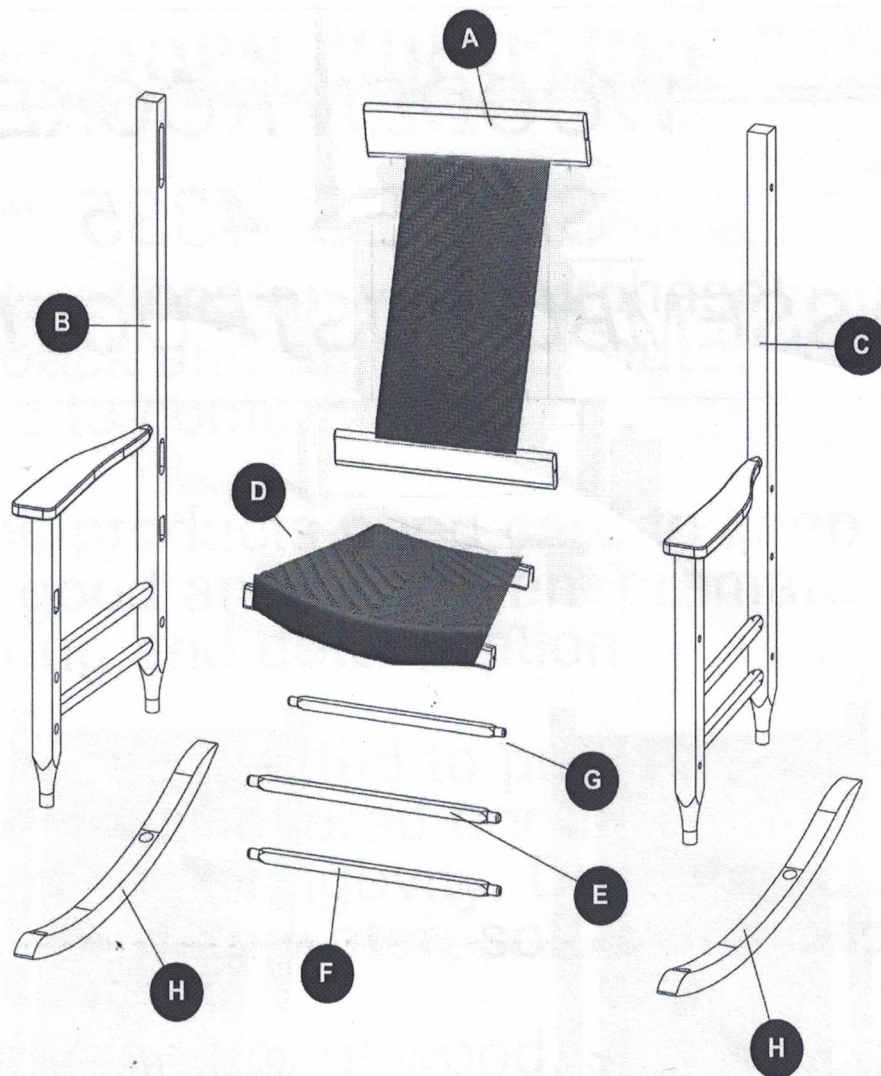




HARDWARE CONTENTS/ADITAMENTOS

**NOTE:** For missing hardware please contact [customerservice@shineco.com](mailto:customerservice@shineco.com)



x 12

 

x 1








x 12



x 4



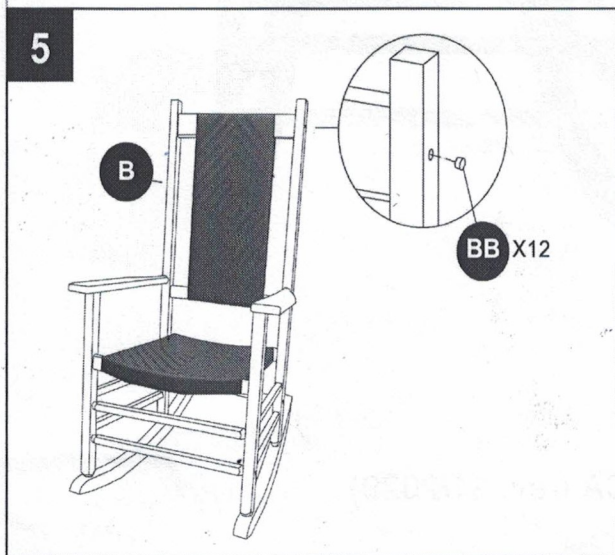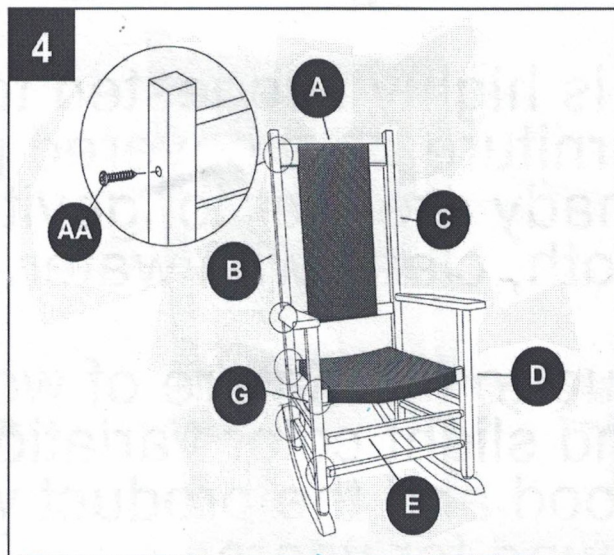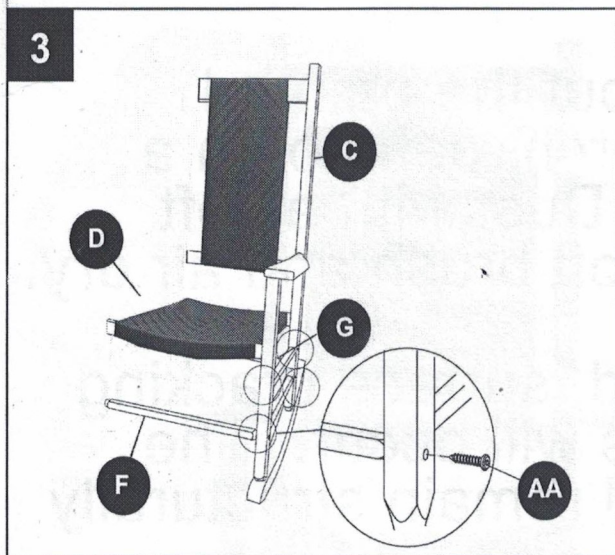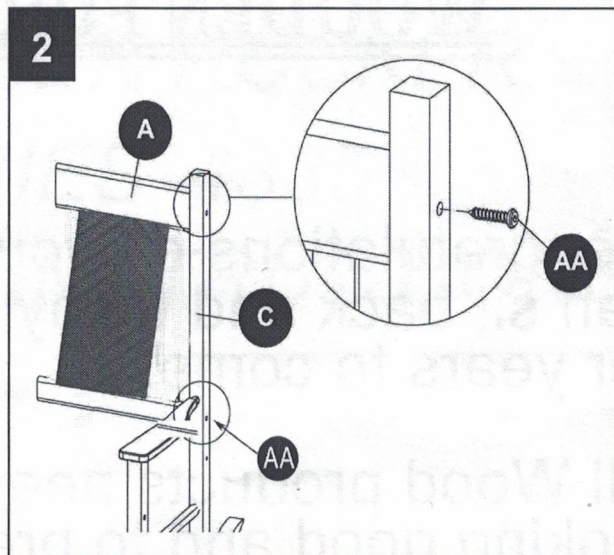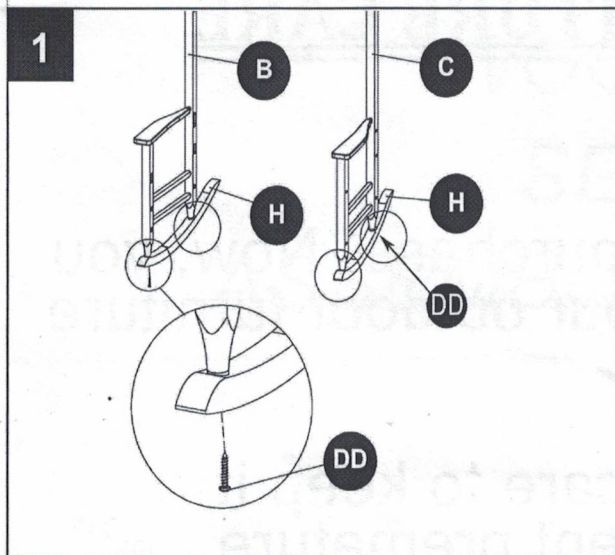

# **WOODEN FURNITURE CARE**

Congratulations on your purchase! Now, you can sit back and enjoy your outdoor furniture for years to come.

All Wood products need care to keep it looking good and to prevent premature weathering and deterioration.

It is highly suggested to put the painted furniture on a covered porch, patio or in a shady area for longevity. Dust with a soft cloth, clean with water, soft brush and air dry.

Due to the nature of wood, surface cracking and slight color variations will occur. The wood and the product will remain structurally sound for years.